EXC-BC265BRL LED Flood Light



Application Environment: Indoor Outdoor

Description

EXC-BC265BRL Light tree lamp are high power outdoor landscape flood lighting fixture with high strength aluminum alloy housing by EXC-LED. Each lighting fixture can be used for accent lighting or flood lighting, such as ancient buildings,landscape garden,etc.

Features

- The newest generation technology: DMX512 parallel bus design
- A new generation of structural waterproof design
- High strength aluminum and low thermal resistance path cooling design
- High reliability modularization design
- Adjustable angle 0 degree ~15 degree, glass surface tilt 5 degree design
- Outdoor lighting protection and electrostatic discharge (ESD) protection design
- Load safety design
- Projection distance: 1-5m


Basic Specifications		
Color Range	W(2200K-6500K), R+G+B, RGBW, R+G+B+W	
Working Voltage	DC 24V	
Max. Power Consumption	72W(W, R+G+B, RGBW), 100W(R+G+B+W)	
Light Source	36(W, RGBW), 12+12+12(R+G+B), 12+12+12+12(R+G+B+W) PCS High Power LEDs	
LED chip Brand	Optional(Cree, OSRAM, Lumileds, Epistar, etc)	
CRI	80	
Control	DMX512, ON/OFF	
Source Life	50,000 h	
Housing	High Strength Aluminum	
Cover	Tempered glass	
Weight	6.64Kg	
Dimensions	265mm x 265mm x 342mm (L x W x H, exclude Mounting Bracket)	
Installation	Installation with screws	



Working Temperature	-40°C to 600°C
Storage Temperature	-40°C to 70°C
Protection Rating	IP66
Efficiency flux	70LM/W(White), 25LM/W(R+G+B), 35LM/W(RGBW)
Beam Angle	W-3030P7: 10° /15° /20° /30° /45° /60° /80° RGB-3030P7 /CREE XP Series: 6° /8° /10° /15° /20° /30° /45° /60° /80° 3535: 30° /45° /60° /80° 5050: 17° /20° /30° /45° /60°

	3030: 17 720 730 743 700	
Host Controller	EXC-5200	
Slave Controller	EXC-2905T1	
Signal Cable	EXC-LED outdoor special cable	
Light Intensity Distribution		
15° Light Intensity Chart	-90* -80* -70* -60* -50* -40* -30* -20* -10* 0 10* 20* 30* 40*	
	—— C0/180 15* —— C90/270 15*	
30° Light Intensity Chart	-90° -80° -70° -60° -50° -40° -30° -20° -10° 0 10° 20° 30° 40°	
	—— C0/180 30* —— C90/270 30*	
60° Light Intensity Chart	-90° -80° -70° -60° -50° -40° -30° -20° -10° 0 10° 20° 30° 40°	
	—— C0/180 60° —— C90/270 60°	




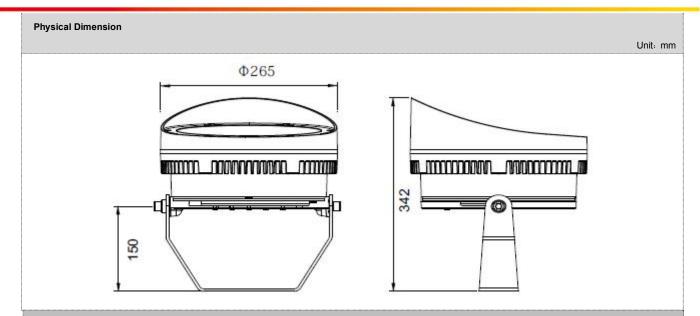

Installation Diagram

Mounting bracket

- 1. Use M5 screws to fix the lamp mounting bracket to the required position as shown in the figure. Lock the fixing screw of the mounting seat, adjust the angle of the lamp and then lock the connecting screws. Secure the installation.
- 2. Loosen the angle-adjustable screw, confirm the installation angle, and tighten the angle-adjustable screw.

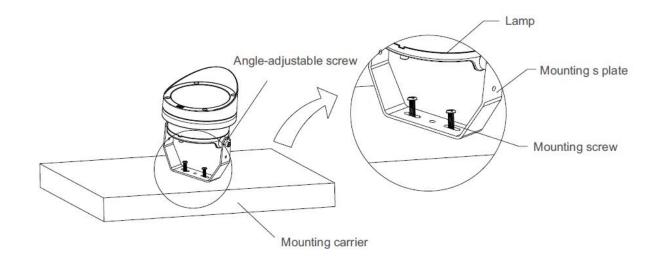





System connection diagram:

- 1. Host controller should connect with slave controller. Working voltage for controllers are AC220V.
- 2. On-line main controller should connect with slave controller, on-line main controller and sub controller working voltage are AC220V.
- 3. each sub-controller with 8 ports, with each port 512 pixels, supporting data converter, supports 100 meters ultra-long haul transmission.
- 4. The CAT-5 e. cable distance should be within 100 meters between host controller and slave controller, between slave controllers and switch, etc.

Offline Controlling System Diagram

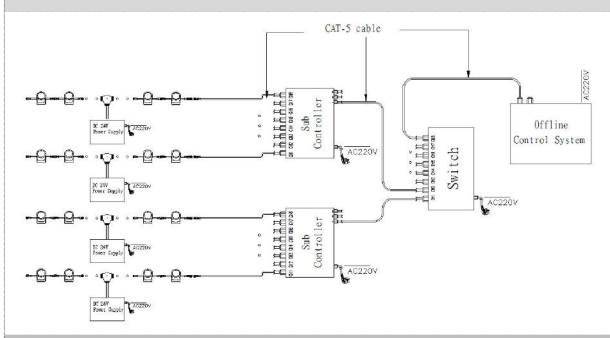

Online Controlling System Diagram

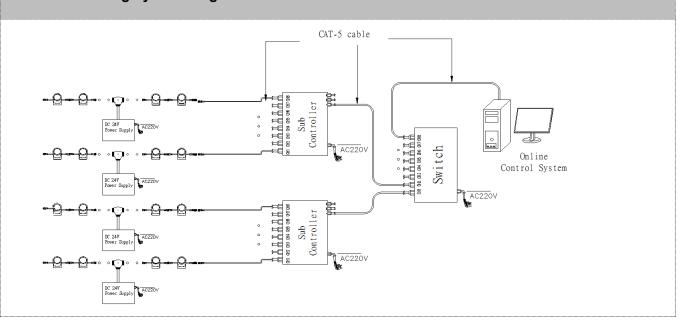



Accessories : 1: Female and Male Connector(Connect to first dot light for signal transmission) Female Connector Male Connector 10_{mm} 10mm 2: Y Shape Connector(For power Distribution) 350mm Male Connector 250mm 250mm Female Connector 3: Interconnection Cable(1.3M,3M,5M is standard length) Male Connector Female Connector T¢ T¢ 4: End Cap Male Connector Male Connector